BRACKET CLUTCH SWIVEL SHADE SWIVEL FLANGE WITH (3) MOUNTING SCREWS 10' CORD WITH TOGGLE SWITCH

*FIXTURE MOUNTED TO WALL USING (2) SMALL FLANGES

KATY SKELTON™

PERRY DOUBLE SCONCE

INSTALLATION INSTRUCTIONS

- Wear Gloves! This will protect the finish on your light, so that it will patina evenly over time. (Gloves are not needed after light is installed to adjust the angle of the fixture, but we recommend touching the fixture as little as possible to keep the finish even.)
- Use the brass screws provided to mount the bracket to your wall.
- Adjust the light fixtures to your desired angle and tighten the clutch swivels to keep the fixture arms in place
- An LED lightbulb is included, but if you would like to use another type of bulb, we recommend 40W or less.