


MERCER CHANDLIER

INSTALLATION INSTRUCTIONS

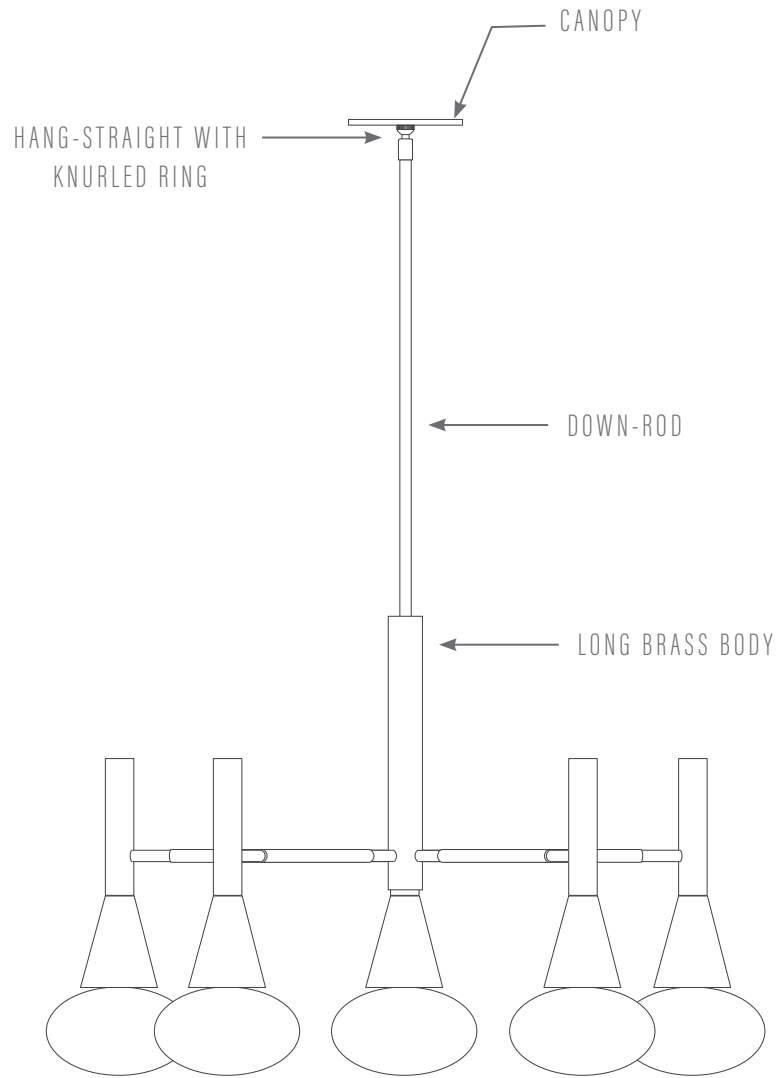

- 1 Wear Gloves! This will protect the finish on your light, so that it will patina evenly over time.
- 2 Unwrap all parts of light, including canopy and down-rod.
- 3 Carefully slip the down-rod over the wires and screw it into the long brass body.
- 4 Screw the knurled ring so that it moves off the hang-straight, downward toward the long brass body and slide it over the down-rod to rest on the long brass body.
- 5 With the lip of the canopy facing up, slip it over the hang-straight and onto the down-rod. Gently slide it all the way down to rest on the long brass body, being careful not to scratch the down-rod.
- 6 Thread the black and white wires through the pipe nipple that is attached to the crossbar (packaged separately in a clear bag), and screw the nipple into the hang-straight.
- 7 With a licensed electrician, wire the light to the junction box.
- 8 Slide the canopy up the down-rod to the ceiling, followed by the knurled brass ring. Screw the ring onto the threading of the hang-straight until the canopy is secured against the ceiling.

KATY SKELTON™

+1 347 930 9363 | info@katyskelton.com | katyskelton.com

PROUDLY MADE TO ORDER IN SAVANNAH, GEORGIA