


# PERRY DOUBLE SCONCE HARDWIRED

## INSTALLATION INSTRUCTIONS

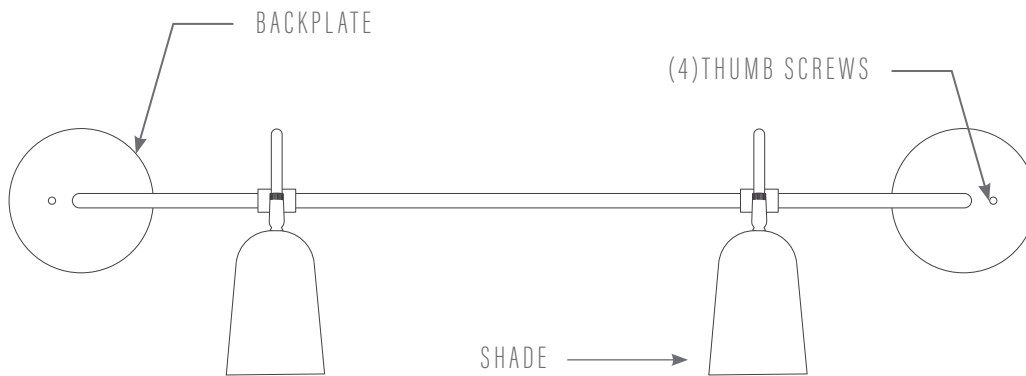

- 1 Wear gloves! This will protect the finish on your sconce, so that it will patina evenly over time. Once installed, you can touch the shade without gloves to adjust the direction of the light.
- 2 Hold the fixture in place where it is to be installed, and mark places to drill for mounting the backplate that will not be installed over the junction box.
- 3 Remove the crossbar from the back of the bracket on the side that will be wired to the junction box.
- 4 Attach the crossbar to the junction box with the machine screws provided.
- 5 With a licensed electrician, wire the light to the junction box.
- 6 Once the fixture is wired, secure the backplate attached to the junction box in place with (2) flat-end thumb screws provided.
- 7 Mount the second backplate to the wall with the remaining (2) thumb screws. These are hanger bolts that may require wall anchors for installation. Please consult your electrician.

\*THIS FIXTURE IS WIRED THROUGH  
THE RIGHT BACKPLATE UNLESS NOTED  
OTHERWISE.

KATY SKELTON™

+1 347 930 9363 | [info@katyskelton.com](mailto:info@katyskelton.com) | [katyskelton.com](http://katyskelton.com)

PROUDLY MADE TO ORDER IN SAVANNAH, GEORGIA